

Shelf trolley G[®]-ORG E 2801/7



Inside dimensions (LxWxH)	approx. 1290 x 520 x 1390 mm
Outside dimensions (LxWxH)	approx. 1380 x 590 x 1660 mm (incl. wheels)
Load capacity	300 kg
Weight	48 kg
Material thickness	shelves 2,0 mm; bottom 1,5 mm
Wheel arrangement D	4 swivel castors 2 wheel with brakes
Order number	023280107

PRODUCT PROPERTIES

- Smooth surface
- 5 permanently welded shelves create 6 evenly spaced storage compartments
- Storage compartments will a raised rim at the side and rear
- Space between the shelves 230 mm
- Every shelf can be fully loaded up to 100 kg equally
- 25 x 25 mm square aluminium pillar profiles on the short sides are also used for pushing the trolley
- All-round, abrasion-resistant, blue PVC bumper on the lower rim of the trolley
- Stable undercarriage support made of galvanised steel
- Roller arrangement D: 4 swivel castors, 2 of which brakes, wheel Ø 160 mm
- Galvanised steel wheel housing, non-marking solid rubber wheels, roller bearings and threadguards


ADVANTAGES

- Suitable for the transport of standard open-fronted storage bins with the dimensions 500 x 300 x 200 mm (L x W x H)
- Easy handling and ergonomic, even at maximum load
- Flexible, ideal when space is tight
- An optimum overview and direct access to the contents
- Very stable and high quality due to the welded shelves
- Long operating life due to excellent manufacture
- Very low net weight with a high degree of stability
- The circular, elastic PVC impact bumper on the lower trolley edge offers protection for shelf trolley and surroundings
- Practical for a wide range of rooms

APPLICATIONS


Retirement and nursing homes, hospitals, chemists, pharmaceutical industry and more

Shelf trolley
G[®]-ORG E 2801/7

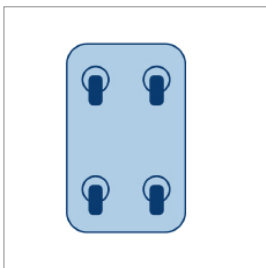

Roller arrangement D:
4 swivel castors, 2 of which
have brakes

OPTIONS

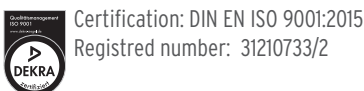

Certification: DIN EN ISO 9001:2015
Registered number: 31210733/2